


barkman™

stone oasis collection

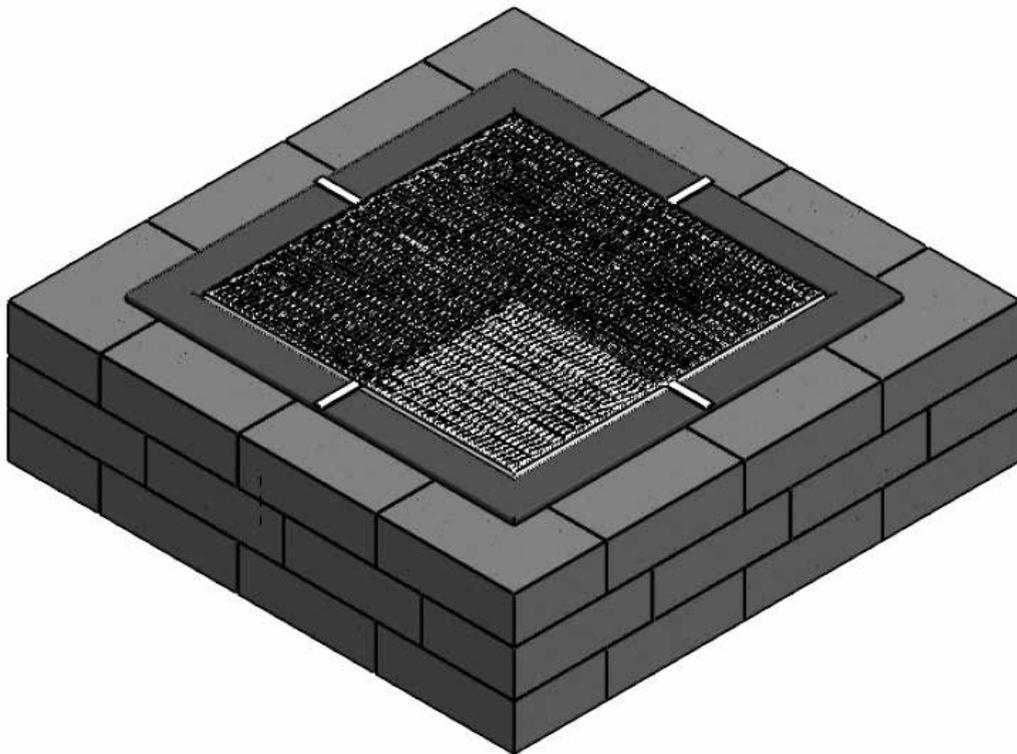

modern firepit

instruction guide

Materials Included:

untumbled ebony quarry stone (36)
spark arrestor 27"
square firepit liner 28" x 28" x 12"
gloves
instruction guide

Tools Required:


level

Note: If installing your stone oasis modern firepit on an unstructured base, please be sure to follow these steps.


- Excavate area approx. 5" below grade.
- Excavate approx. 6" larger than your actual kit dimensions to ensure a stable base
- Fill 4" with 3/4" limestone and compact.
- Level out 1" of sand and install kit as per the instruction guide.

If you are installing on an existing patio and/or the base prep is not necessary, then you can proceed to the first step on the following page.


quarry stone

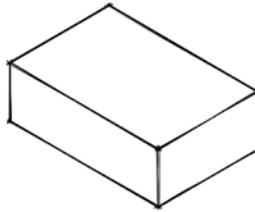

spark arrestor

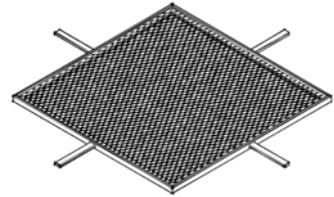

square firepit liner

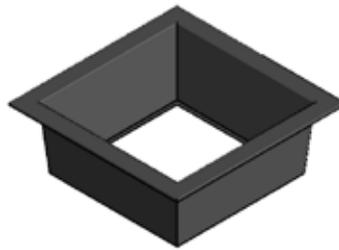


IMPORTANT: READ PRIOR TO INSTALLATION



1. The consumer is responsible for reviewing the local regulations pertaining to the installation and use of this product. Please confirm that use of this product is in compliance with the by-laws, regulations, building codes and laws of your jurisdiction before using.
2. Make sure that you locate your respective gas lines, wires, water pipes, and/or any above ground and underground services in your area and install your firepit in the proper distance away from them. Check with your provider for location and distance requirements prior to installation.
3. Check with your insurance provider concerning the installation, use, value implications and/or any other considerations in regards to your oasis firepit kit.
4. Firepit is not suitable for large fires. Fire size should not allow flame to contact the top layer. Firepits should not be placed directly on concrete products as high heat can adversely affect the integrity of the product.

Please check www.barkmanconcrete.com/resources for any manual updates.

pattern A

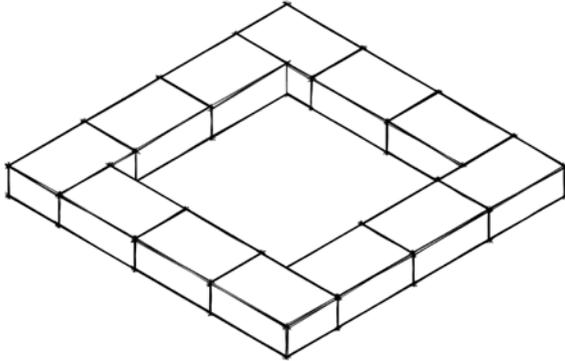

pattern B

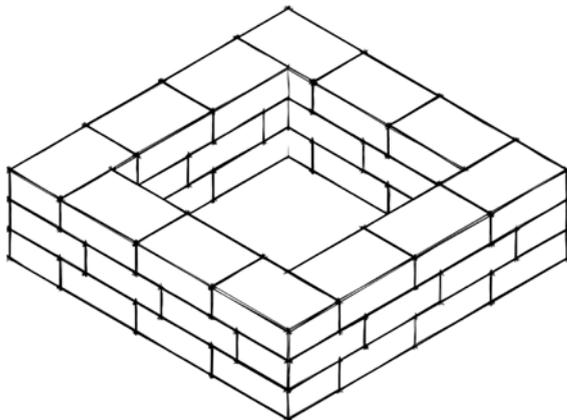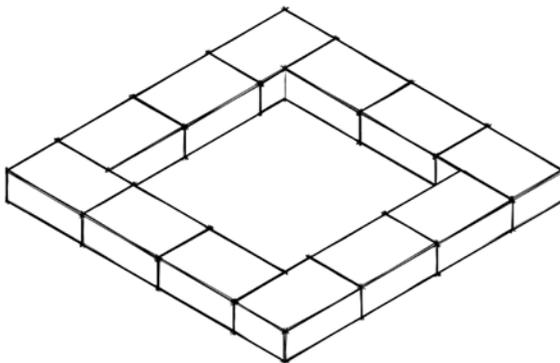

1. On your selected location, lay out the first layer using pattern A. Ensure that this layer is level to allow for a proper installation.

2. The second layer uses pattern B, which is offset from the previous pattern.

3. The final layer uses pattern A. Place the square firepit liner in the middle of the firepit and put the spark arrestor on top.

Note: Be careful not to touch the steel liner and spark arrestor while they are hot. They can still retain heat long after the fire has been extinguished.

BARKMAN CONCRETE LIMITED

Steinbach Office
152 Brandt Street,
Steinbach, MB R5G 0R2
T 204 326 3445 or 1 800 461 2278
F 204 326 5915
steinbach@barkmanconcrete.com

Winnipeg Office
901 Gateway Road,
Winnipeg, MB R2K 3L1
T 204 667 3310 or 1 800 342 2879
F 204 663 4854
winnipeg@barkmanconcrete.com

Calgary Office
813 McCool Street, Box 1136,
Crossfield, AB T0M 0S0
T 403 946 4630
F 403 946 4631
calgary@barkmanconcrete.com

Vancouver Office
2104-290 Newport Drive,
Port Moody, BC V3H 5N2
T 778 689 7670 or 1 800 461 2278
F 604 949 0321
vancouver@barkmanconcrete.com



barkmanTM
creating concrete solutions
www.barkmanconcrete.com