



**ROSETTA**<sup>®</sup>  
THE LOOK AND FEEL OF NATURE

OUTCROPPING  
COLLECTION  
INSTALLATION GUIDE



# Welcome



**Thank you for your interest** in installing Rosetta's premium line of hardscape products. You will find that no other engineered system offers the **natural beauty**, the **design flexibility**, and the **structural stability** of the Rosetta system. This installation brochure will give you the fundamental knowledge needed to construct **stunning, quality** retaining walls and landscape step systems that will last for generations to come.

**[www.discoverrosetta.com](http://www.discoverrosetta.com)**



# Pre-Construction

Before you start construction, take the time to complete the necessary planning and preparation. This process will keep your project running efficiently and will aid in completing a quality installation. Make sure to address the following:


**Develop a project safety plan.** Be sure to follow all applicable governmental (ie. OSHA) standards. Be sure to address items such as: personal protective equipment, maintaining safe slopes, fall protection, rigging and lifting, and any other safety precautions.

**Attain the necessary permits and engineering.**


**Note:** This guide is intended to supplement a detailed, site-specific wall design prepared for your project by a Professional Engineer. The actual design for your project supersedes any recommendations presented here.

**Review the project plans.** Make sure that the plans take into account current site and soil conditions. Clays or poor soils place significantly greater loads on walls than free draining aggregates. If poor soils are present, make sure the plans account for them.

**Develop a plan** to control surface water during construction.

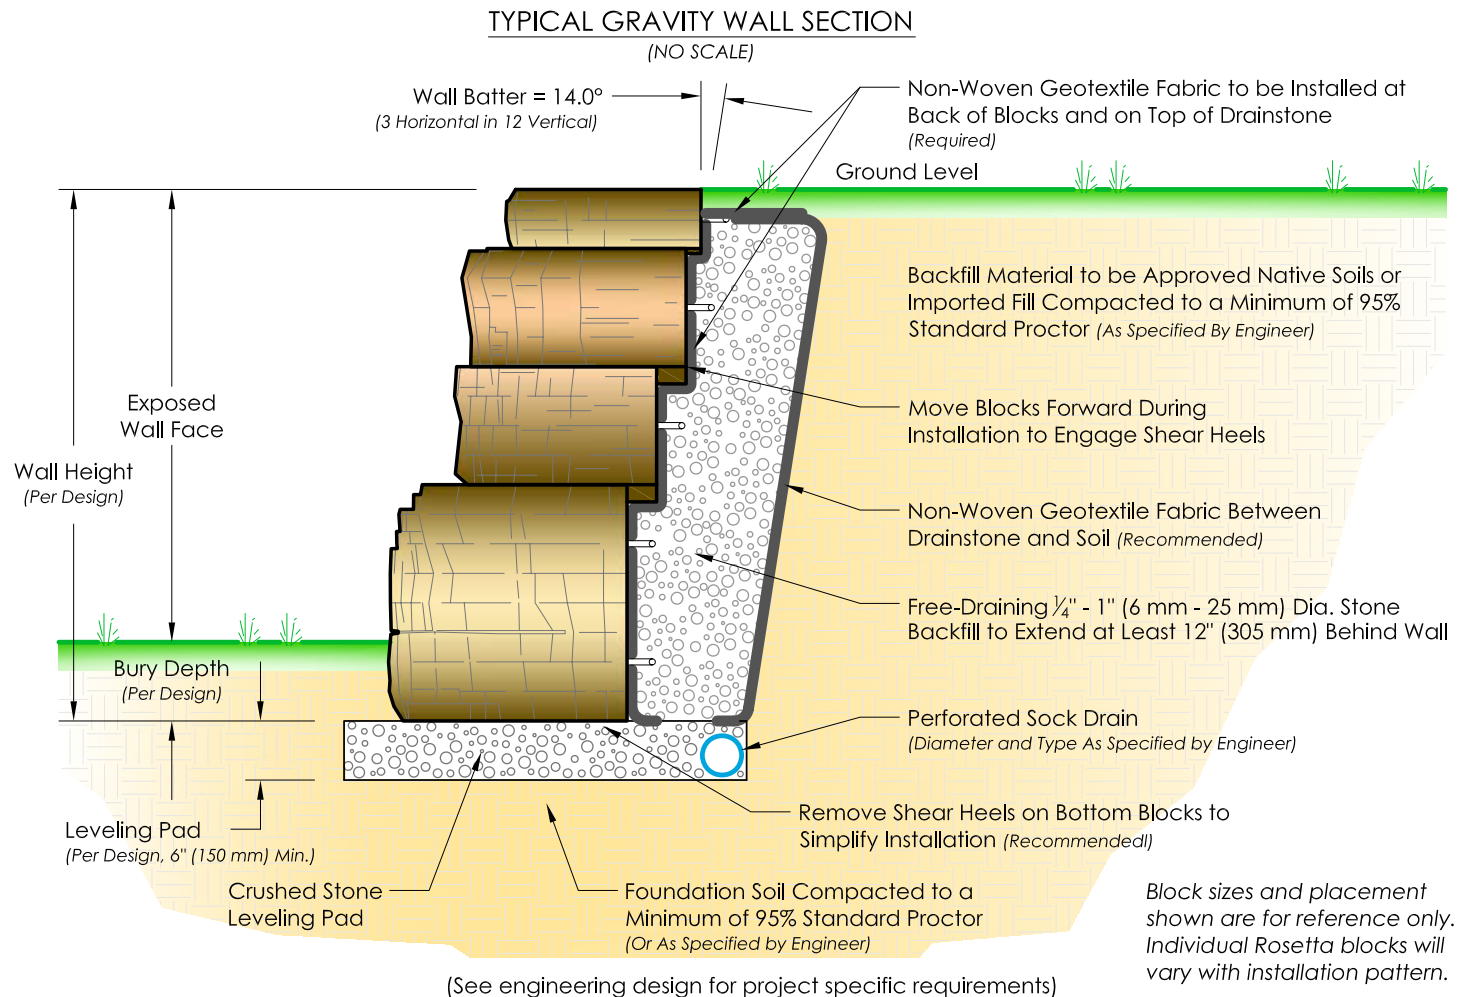

# Step 1. Base Preparation

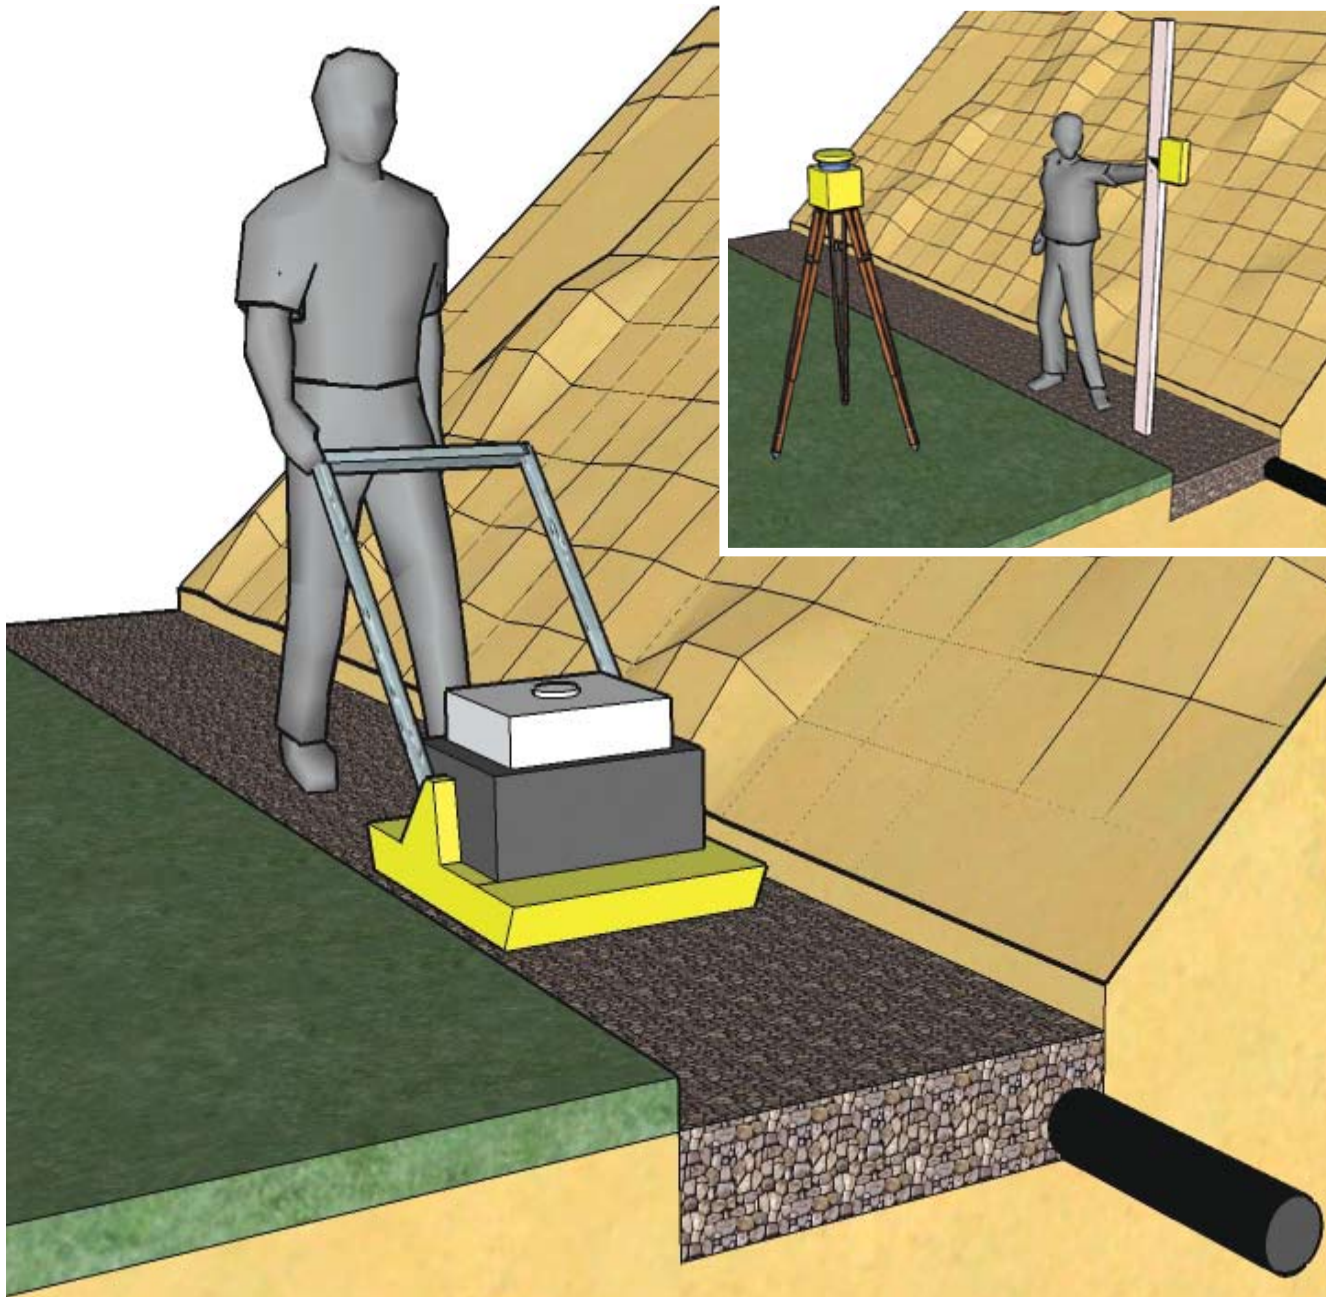

Proper base preparation is one of the most critical elements of retaining wall construction. The retaining wall is only as stable as the foundation it is placed on. If sub-base soils are deemed unstable, contact a qualified geotechnical engineer for remediation.

First, **excavate for the leveling pad**. The minimum leveling pad thickness is 6". Higher walls may require a thicker leveling pad based on the detailed wall design. The leveling pad should be a minimum of 40" wide, or wider if called for in the engineered construction drawings. The sub grade material needs to be compacted to 95% of standard proctor maximum dry density.

**Place 4" perforated sock drain** at the back of the excavated trench. Make sure drain has a long term gravity outlet (either to daylight or to approved catch basin).

**Place clean crushed stone into excavated trench**. Level and compact stone to the design thickness. Check level with a laser or transit. Note: Take time to make sure the base is accurately leveled. This will allow the wall to be installed much more efficiently.




# Step 2. Place Bottom Course

Proper placement of the bottom course of wall stones is critical in determining the overall appearance and integrity of the finished project. Take extra time on this step and the rest of the project will go smoothly. At this point you need to determine the best point of origin for the wall. If you have a fixed point, such as a building corner or a 90° corner, you will want to start the wall from that point and work your way out. This will minimize cutting of blocks. If there are no fixed points, start the wall at the lowest design elevation, as it is easier to step the base up than it is to step the base down.

Nearly all segmental block wall systems have a built in batter to provide greater wall stability. With Rosetta, the batter is 14 degrees, which equals 3" of setback for every vertical foot up.

One of the unique features of the Rosetta system is multiple block heights. To provide a uniform wall batter with multiple height blocks, the setback of the blocks varies proportionally with the block height. The setback in blocks is achieved with shear heels which are cast into the Rosetta blocks. For a 6" high block, the shear heels are 1.5" deep (1/2 times 3"). For a 12" high block, the shear heels are 3" deep (1 times 3"). For a 24" high block, the shear heels are 6" deep (2 times 3").

To ensure proper wall alignment and to account for the multiple height blocks and varying setbacks, you have to adjust the bottom row of blocks based on their height. Setup a traditional string line for the back of the wall, then offset the blocks per **Figure 1**.

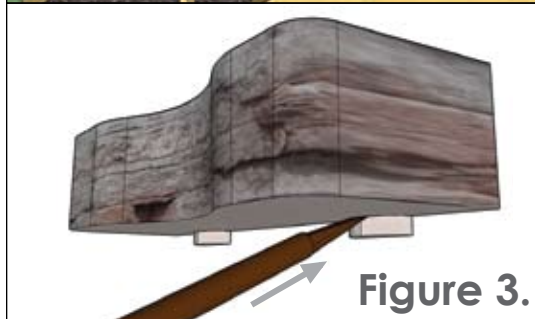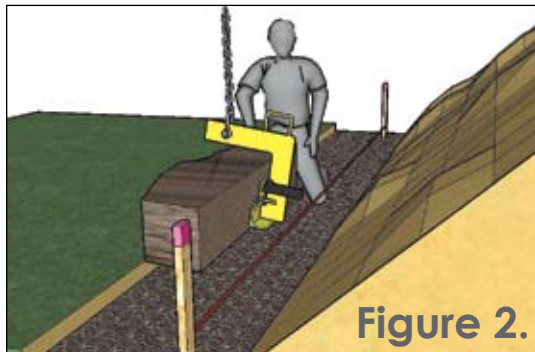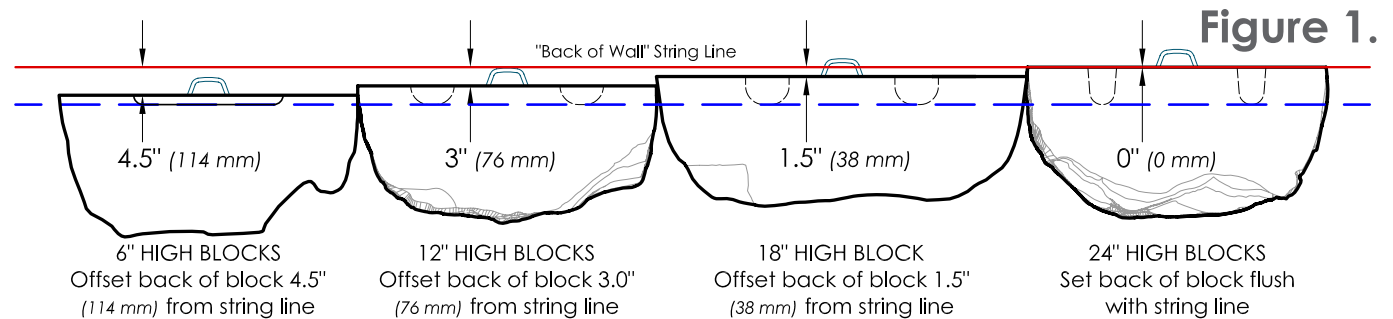

You may find it useful to **remove the shear heels from the blocks to be placed on the bottom course**. This can be done using a demolition bar. (see **Figure 3**.) Be sure to do this in a safe manner, keeping your body away from potential falling hazards.

Using an appropriately rated skid steer or small excavator and the Rosetta Lifting Device, **place each block along the string line according to Figure 1**. Be sure that the safety latch on the Lifting Device is engaged before lifting each block. Use a bar to make small adjustments to bring the blocks into line.

Please note that the Rosetta blocks have an irregular taper on the sides. When placing the bottom course of blocks (as shown on Figure 1), make sure the back corners of the blocks line up with each other perpendicular to the string line.

After placing each block, **check for level both front to back and side to side**. If the block is out of level, either pick up the block and correct the base material, or tap it into place using the setting machine and a block of wood (to avoid marring the wall stone).

**Continue following the above procedures until the entire course of wall stones has been placed.**

# Step 3. Place Upper Courses

Placing the next course of blocks is similar to placing the first course. The primary difference is that you must **engage the shear heels of the upper blocks with the backs of the lower blocks**.

**Position the clevis in the Rosetta Lifting Device** in such a way that the front of the block is slightly higher than the back of the block.

**Hold each block behind and approximately 1/2" above the block below.**

**Swing the block toward the face of the block below until both shear heels engage.**

**Set the block down and make final adjustments with a large pry bar.** Do not leave any gaps between blocks unless you are constructing a planter pocket.



# Step 4. Backfill

Appropriate selection and placement of backfill is necessary for the structural integrity of the wall. **Place only backfill materials which are consistent with the wall design. For safety reasons, do not stack wall stones more than two feet high before backfilling. See Figure 4.**

Before placing backfill materials, **place a layer of non-woven geotextile fabric behind the blocks.** This will keep materials from eroding through the small voids between the blocks.

**Place clean stone a minimum of one foot behind the wall.** This creates a continuous drainage course for any water to rapidly reach the drain pipe. Hydrostatic pressure is the number one cause of retaining wall failure. This step is critical in keeping backfill materials dry and structurally sound.

Beginning at the back of the clean stone and working away from the wall, **place and spread backfill soils.**

**Compact soils in lifts of appropriate depth for the compaction equipment being used (typically 4-12").** Backfill materials must be compacted to 95% Standard Proctor. Generally, you should operate compaction equipment parallel to the face of the wall. Start at the back of the blocks, and work your way away from the wall until you reach undisturbed soils. Continue placing and compacting backfill materials until you approximately reach the top of the upper course of blocks.

**Repeat steps three and four until you have reached finish grade for the wall.**

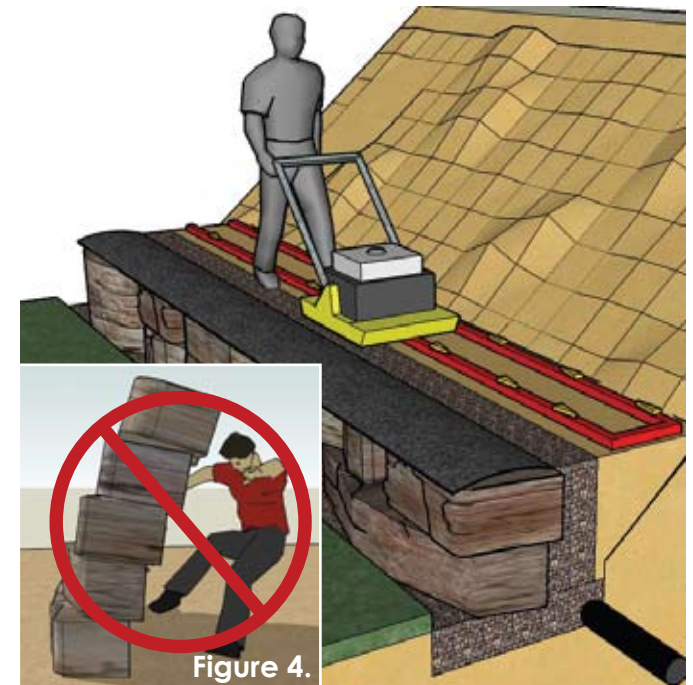


Figure 4.

# Step 5. Finishing The Wall

## FINISHING OPTIONS




Plant appropriate vegetation on the back of the wall



Use Rosetta steps as top blocks, especially when the grade falls away at the ends of the wall



Place pavers flush with the back of the Rosetta Blocks

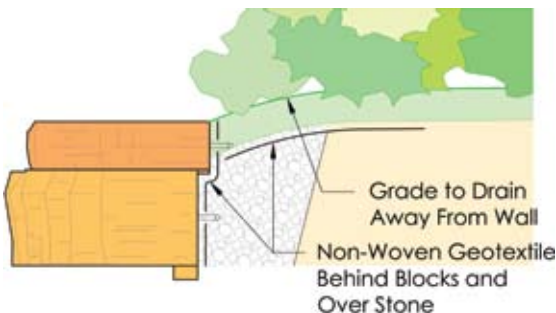

Grade slope to rise above top blocks, giving the look of **natural outcropping** in the bank.  
(Design must account for surcharge loading)

Completing a few simple tasks near the end of the project will ensure that the wall will function properly and look good for years to come.

**Make sure that the drain pipe is tied into a catch basin or run to a long term daylight opening.** If you are using flexible drainpipe behind the wall, convert it to Schedule 40 PVC or equivalent before outletting from behind the wall. This will insure that the pipe is not easily crushed during future construction.

**Place non-woven geotextile fabric over the clean stone.** You may need to leave the clean stone down 4" to 6" from the top of the wall to allow for landscape or other materials.

**Grade the top of the wall in such a way that water runs off away from the wall.** Never leave the top of a wall graded where surface water will pond behind the wall. If future grading is to take place by others, you should have a responsible party sign off regarding this point.



# Other Applications



# Step Installation


**Begin the step installation process** by measuring the total rise required and calculating the number of steps to be used. Each step has a 5½" or 7" rise, but should be sloped approximately ½" such that the back of the step is higher than the front of the step. This sloping will facilitate surface water drainage. With appropriate sloping, the net rise of each step is 6" or 7½". Divide the total rise by 6" or 7½" to get the number of steps required.

Next, **calculate the tread width**. Generally, when the grade allows, a 12" or wider tread is desirable. To calculate the tread width, divide the total allowable horizontal run minus the width of the top step, by the number of steps minus one. The one less will account for the top step.

**Consider the following example:**

Total rise = 42", Total horizontal run = 108", Width of top step = 24", Rise of steps = 5½", Number of steps =  $42" \div 6"/\text{Step} = 7$  Steps

Tread Depth =  $(108" - 24") \div (7 - 1) = 14"$  Tread Depth

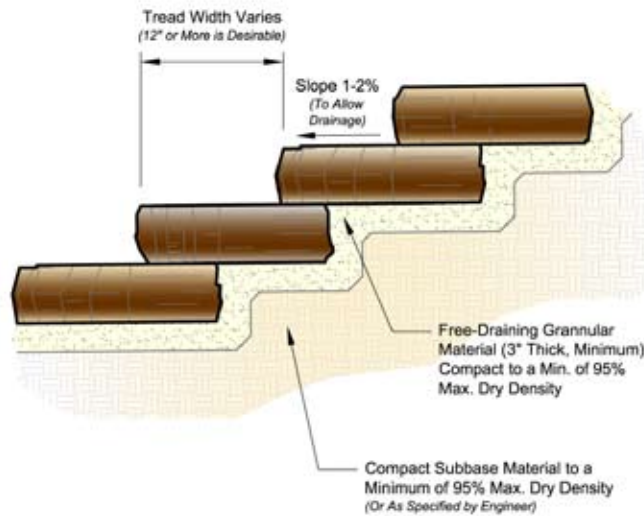

**Excavate and grade the area for first step.** Steps should be placed on at least 3" of free draining soil, such as sand or pea-stone. Compact soil to a minimum of 95% Standard Proctor.


**Place step** with either forks or straps using a small excavator or skid-steer to lift the piece into place. Practice safe handling procedures during this process.

**Fill behind each step** with free draining soil and compact to 95% standard proctor. Remember to slope fill to allow for proper drainage when next step is placed. Continue placing steps in this manner until finish grade is reached.



# Outcropping Pallets

**Pallet A** | 18 ft.<sup>2</sup>  
4000 lbs.

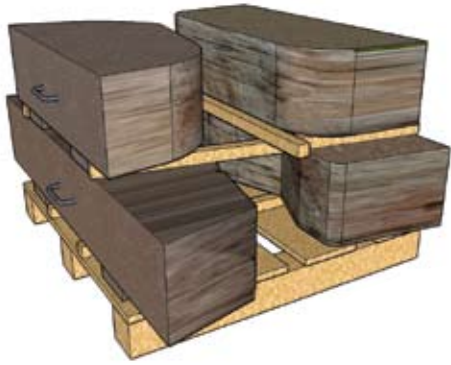

12" x 3' 6"



12" x 4'



12" x 5'



12" x 5' 6"

**Pallet B** | 18 ft.<sup>2</sup>  
4000 lbs.



6" x 2'



6" x 3'



12" x 3'



6" x 4'



12" x 4' 6"



12" x 6'

**Pallet C** | 18 ft.<sup>2</sup>  
4000 lbs.



24" x 4'



18" x 5'



6" x 2'




6" x 3'

Note: Color, texture and shape may vary. Length dimensions are nominal.

# Steps

## Irregular Steps

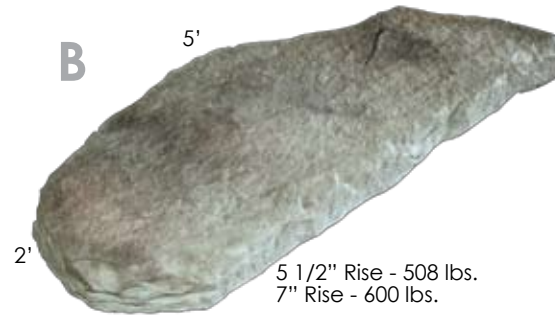

Note: Color, texture and shape may vary.

\*All Dimensions Nominal

## Dimensional Steps




# Sample Patterns


One of the great advantages of the Rosetta system is the ability of a designer or a contractor to lay out a wall in advance, saving time and effort during installation. The following patterns can be used to aid in wall lay-out and design. Each pattern is 90 square feet and uses 2 A Pallets, 2 B Pallets, and 1 C Pallet. Rosetta custom layout and design software is also available on our website. Please visit [www.discoverrosetta.com](http://www.discoverrosetta.com) to download the program.

Please note that the length dimensions shown for Rosetta blocks are rounded for reference. The actual length of the constructed wall will vary slightly from the pattern dimensions shown.


## 2' x 45'



## 3' x 30'

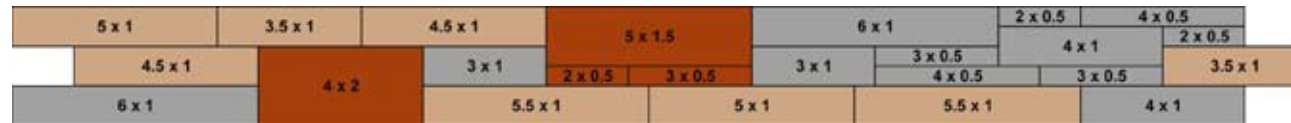

## 4' x 22.5'

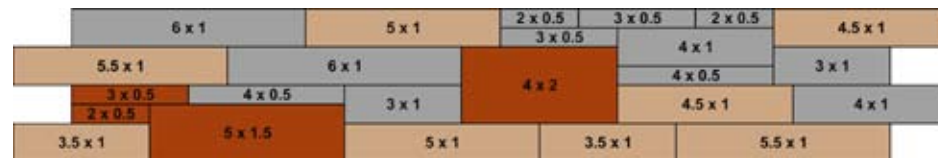


## 5' x 18'




# Curves

Rosetta Blocks have shear heels which provide a setback from lower blocks in the wall, causing the wall to batter back. This batter is important to the engineering design of the wall, and it must be accounted for during construction of a curved wall section.

If you are constructing an **outside** (convex) curve, the wall batter will cause the blocks higher in the wall will have a shorter radius around the curve than lower blocks. This will cause the higher blocks to “grow” in the wall layout pattern. (This is similar in concept to the inside lane of a race track being shorter than the outside lane.) The result is a potential overlap between some of the blocks in the wall. The best way to deal with this overlap is to sawcut the end of the smaller block, which allows the blocks to fit tight together and all the shear heels to be properly engaged. This sawcut is typically made on an angle to match the taper on the side of the block you are abutting.

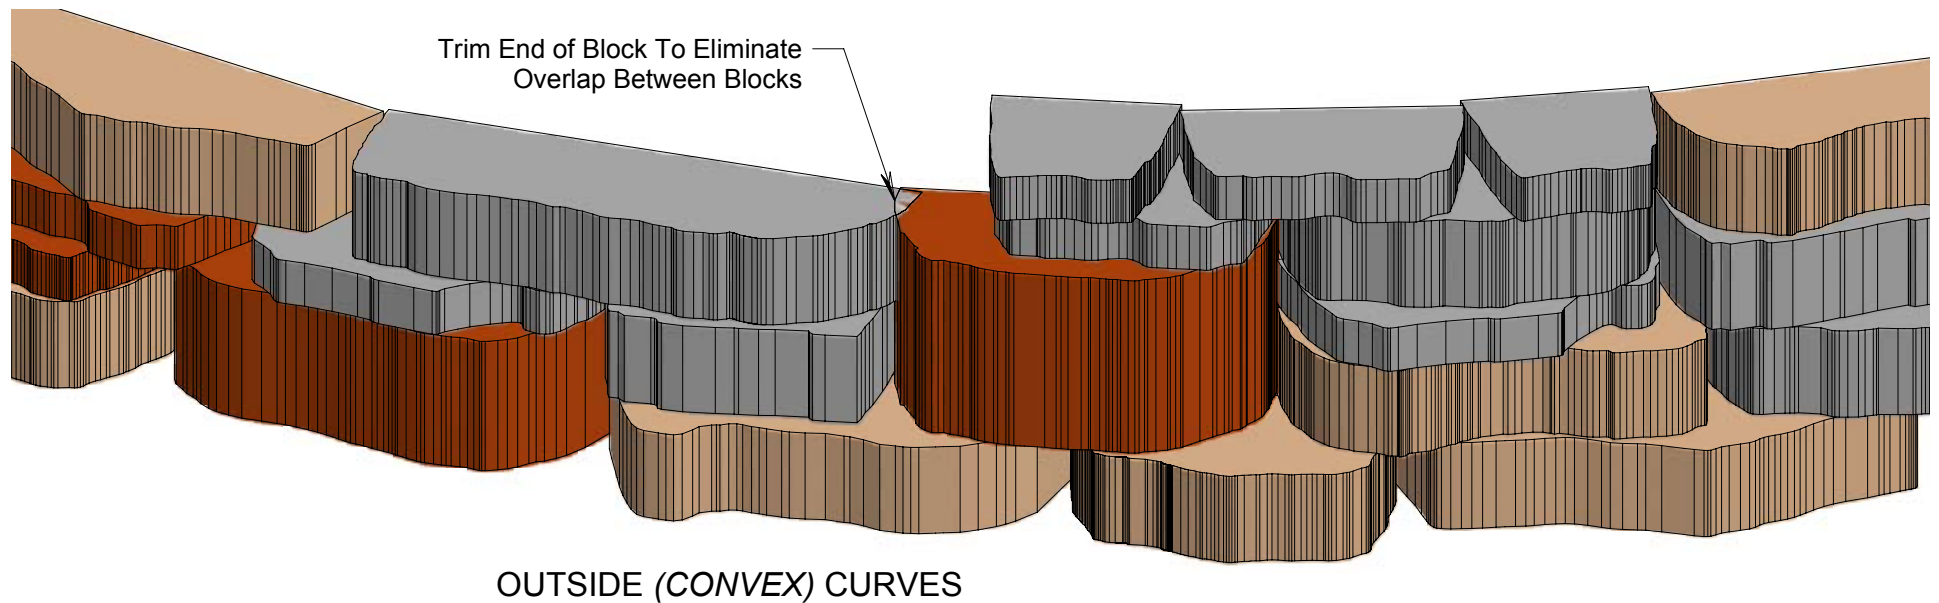

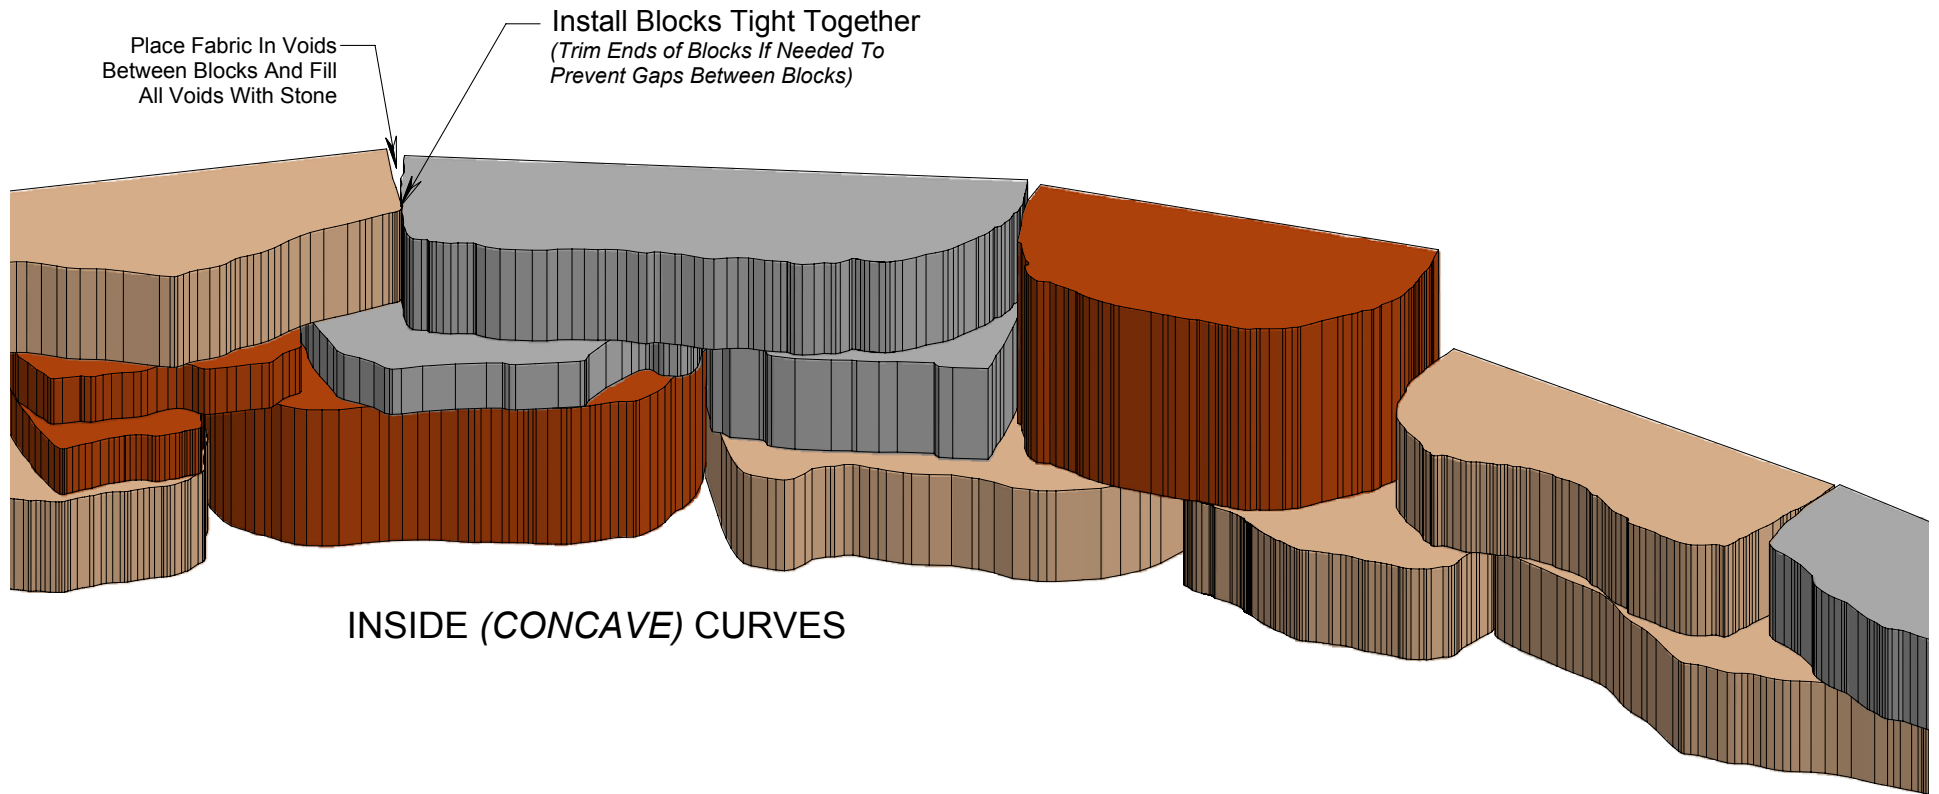


If you are constructing an **inside** (concave) curve, the wall batter will cause the blocks higher in the wall will have a longer radius around the curve than lower blocks. The important step when constructing an inside curve is to keep all blocks tight together. In most cases, the blocks will touch somewhere along the sides of the blocks, not at the back of the blocks. If needed, you can trim the ends off some blocks to prevent gaps from opening up between blocks. When constructing a curve with a short radius, voids may form at the back of the wall where two blocks meet. If this happens simply fill the void areas with drainstone.

Following these steps, Rosetta walls can be properly constructed while providing the flexibility to construct a wide range of curves.

# Corners



Rosetta has two corner blocks to help make a 90° corner in the wall. The corner blocks are four-sided, and can be installed with alternating faces exposed to maintain a more random look.

The sizes of the corner blocks have been chosen to account for the wall batter in both directions. Two 6" high corner blocks are typically stacked on top of each other and placed on top of a 12" high corner block. Every 12" the corner blocks are intended to be stepped back 3" in both directions. In a few areas, you may need to trim a small part of the corner blocks near the back of the wall to avoid interference with the shear heels on adjacent blocks. See the sample pattern shown here, which details how to make a 90° corner with (4) A Pallets, (4) B Pallets, (2) C Pallets, (3) 12" high corner blocks, and (4) 6" high corner blocks.

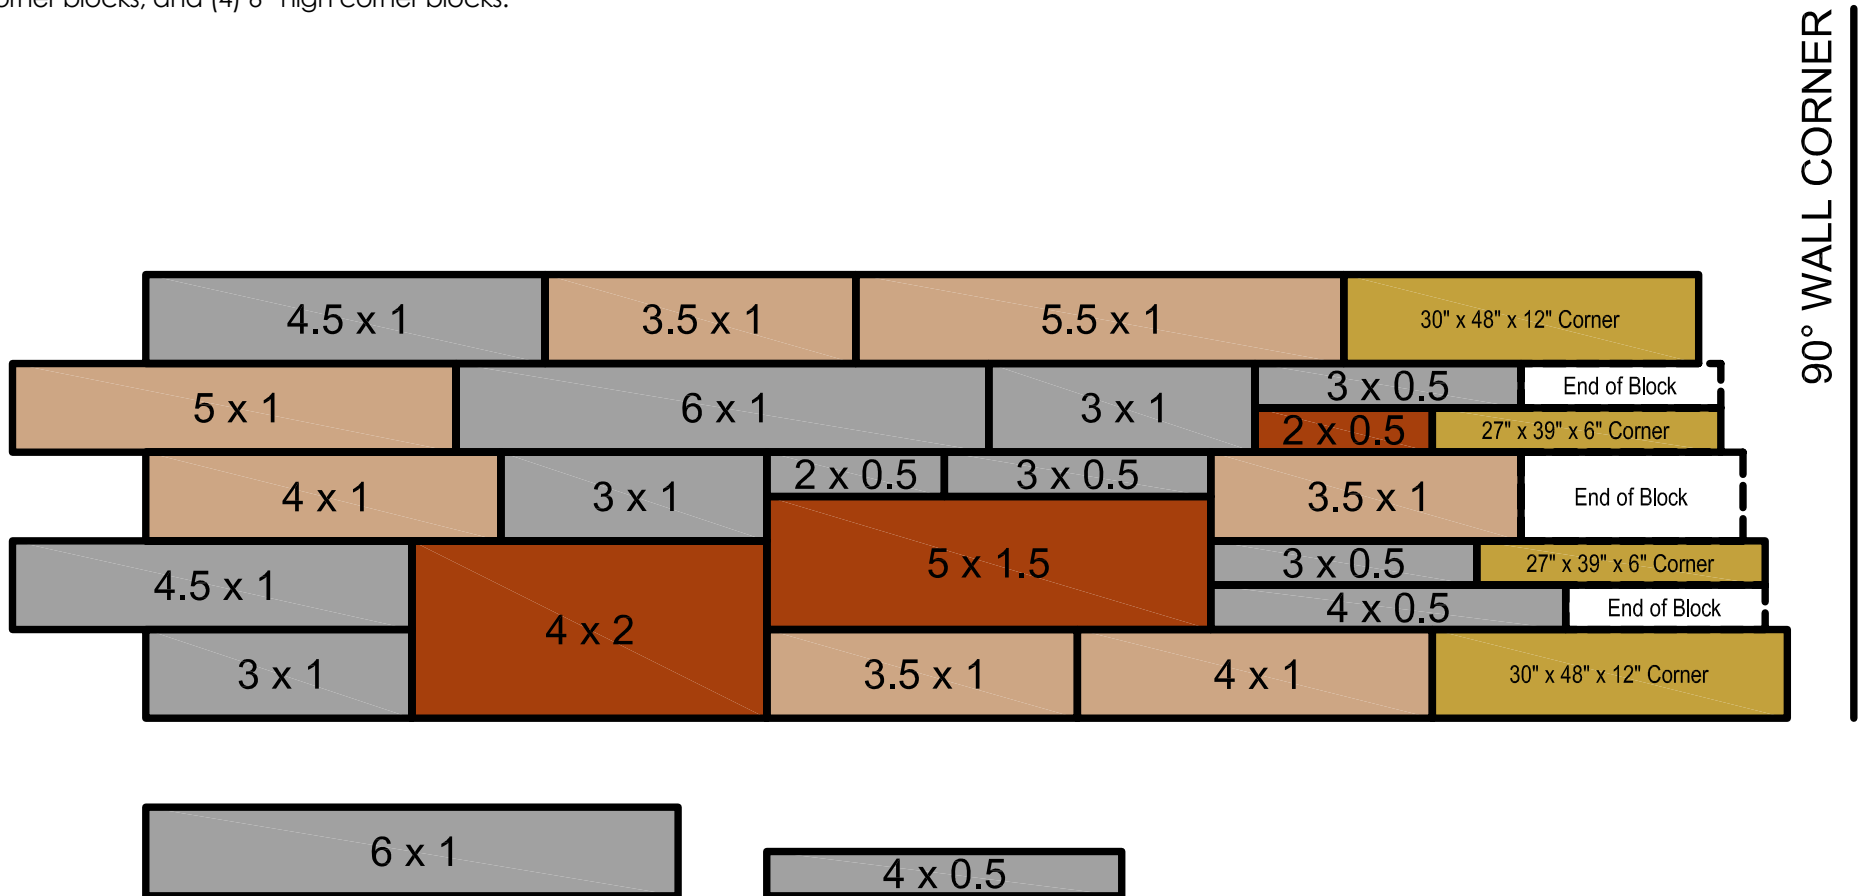



# Corners

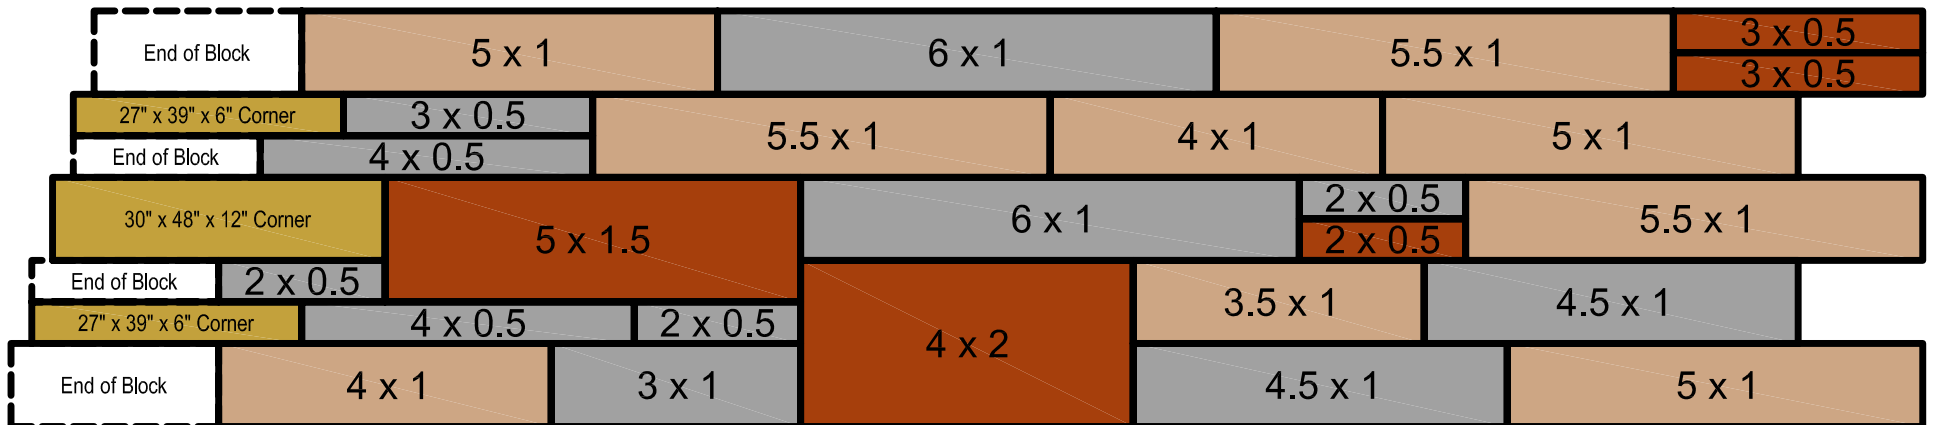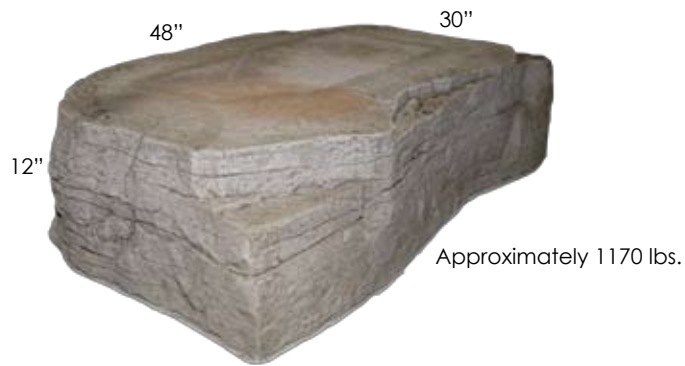

# Engineering & Design

The Rosetta wall system can be engineered to meet your specific needs. For the most up-to-date design information and preliminary wall height charts visit our web-site and click on the DESIGN/ENGINEERING link. There you will find tools, ranging from testing reports to CAD details, to assist in preparing a detailed, site-specific design for your wall.

Rosetta walls are intended to be designed by a professional engineer and built with appropriate construction oversight, giving you the look of a natural stone wall and the confidence of a fully engineered wall system that will stand the test of time.

## ROSETTA® HARDSCAPES LLC - PRELIMINARY WALL HEIGHT GUIDE

### GRAVITY WALL WITH POURED-IN-PLACE CONCRETE BACKFILL

Silty Sand, Clayey Sand with an Internal Angle of Friction ( $\phi$ ) = 28°

Wall Loading Condition	Design Height ft (m)	Minimum Wall Bury Depth ft (m)	Minimum Leveling Pad Depth ft (m)	Concrete Width Behind Blocks ft (m)	Concrete Height Above Stone ft (m)	Maximum Exposed Wall Height ft (m)
• NO BACKSLOPE • NO SURCHARGE	≤ 5.5 (1.68)	See Preliminary Gravity Charts	0.5 (0.15)	1.5 (0.46)	1.0 (0.30)	5.5 (1.68)
	6.0 (1.83)	0.5 (0.15)	0.5 (0.15)	2.0 (0.61)	2.0 (0.61)	6.5 (1.98)
	7.0 (2.13)	0.5 (0.15)	0.5 (0.15)	2.5 (0.76)	3.0 (0.91)	7.5 (2.29)
	8.0 (2.44)	0.5 (0.15)	0.5 (0.15)			
• NO BACKSLOPE • 100 psf (4.79 kPa) LIVE LOAD SURCHARGE	≤ 4.0 (1.22)	See Preliminary Gravity Charts	0.5 (0.15)	1.5 (0.46)	1.0 (0.30)	4.5 (1.37)
	5.0 (1.52)	0.5 (0.15)	0.5 (0.15)	2.0 (0.61)	2.0 (0.61)	5.5 (1.68)
	6.0 (1.83)	0.5 (0.15)	0.5 (0.15)	2.5 (0.76)	3.0 (0.91)	6.5 (1.98)
	7.0 (2.13)	0.5 (0.15)	0.5 (0.15)			
• NO BACKSLOPE • 250 psf (11.96 kPa) LIVE LOAD SURCHARGE	4.0 (1.22)	See Preliminary Gravity Charts	0.5 (0.15)	2.5 (0.76)	2.0 (0.61)	3.5 (1.07)
	5.0 (1.52)	0.5 (0.15)	0.5 (0.15)	3.0 (0.91)	3.0 (0.91)	4.5 (1.37)
	6.0 (1.83)	0.5 (0.15)	0.5 (0.15)			
	7.0 (2.13)	0.5 (0.15)	0.5 (0.15)			
• 12.5 (21.8°) BACKSLOPE • NO SURCHARGE	≤ 4.0 (1.22)	See Preliminary Gravity Charts	0.5 (0.15)	2.5 (0.76)	1.0 (0.30)	4.5 (1.37)
	5.0 (1.52)	0.5 (0.15)	0.5 (0.15)	3.0 (0.91)	2.0 (0.61)	5.5 (1.68)
	6.0 (1.83)	0.5 (0.15)	0.5 (0.15)	4.0 (1.22)	3.0 (0.91)	6.5 (1.98)
	7.0 (2.13)	0.5 (0.15)	0.5 (0.15)			

**NOTES:** The above chart was prepared by Rosetta® Hardscapes LLC for estimating and conceptual design purposes only. All information is believed to be true and accurate, however, Rosetta® Hardscapes LLC assumes no responsibility for the use of these design charts for actual construction. Determination of the suitability of each chart is the sole responsibility of the user. Final designs for construction purposes must be performed by a registered Professional Engineer using the actual conditions of the proposed site.

- Unit weight of 28°, 30°, 34° and 40° soils is assumed to be 120pcf (18.9 kN/m<sup>3</sup>).
- Minimum factors of safety are 1.5 for sliding, 1.5 for overturning and 2.0 for bearing capacity.
- Global stability has not been addressed in these charts.
- The wall design shall address both internal and external drainage and shall be evaluated by the Professional Engineer who is responsible for the final wall design.
- Backfill material to be compacted to 95% standard proctor.
- All Rosetta® Hardscapes LLC Wall System Specifications are to be followed.
- Block sizes and placement shown for reference only. Individual Rosetta® Hardscapes blocks will vary with installation pattern.
- Assumed concrete backfill minimum  $f_c$  = 2500 psi (17.2 MPa).
- Rebar ties shall be placed over the 18 mm dia. steel hooks cast in the back of the Rosetta® Hardscapes blocks. Assumed ties = 18 in (45.7 cm) long #4 rebar bent into U-shaped ties (each leg = 9 in. (22.9cm)).

See Project Specific Design Drawings for Full Construction Details  
April 29, 2008

#### TYPICAL WALL SECTION WITH CAST-IN-PLACE CONCRETE BACKFILL (NO SCALE)

Block sizes and placement shown are for reference only. Individual Rosetta blocks will vary with installation pattern. This drawing is conceptual in nature and for general reference only. Final designs for construction must be prepared by a registered Professional Engineer using the actual conditions of the proposed site. Final wall design must address both internal and external drainage and shall be evaluated by the Professional Engineer who is responsible for the wall design.

Approved by: J. Johnson  
Date: 03/02/08  
Sheet: 1 of 1

#### TYPICAL ROSETTA HARDSCAPES GRAVITY WALL WITH CAST-IN-PLACE CONCRETE BACKFILL (NO SCALE)

Approved by: J. Johnson  
Date: 03/02/08  
Sheet: 1 of 1

ROSETTA® HARDSCAPES LLC  
65481 US-51 SOUTH CHARLEVOIX, MI 49720  
810777-6558 • 231-231-7856 Fax • 800-828-0808

#### PARAWEB STRAP DESIGN

This sheet highlights some of the design values used to prepare the Preliminary Rosetta Wall Height Guide charts. It is intended to serve as reference information for Design Professionals only. Wall design requires a detailed understanding of engineering concepts, and must be prepared by a Licensed Professional Engineer.

Paraweb strap is designed to hold the individual facing blocks into a reinforced soil mass. The capacity of the strap to resist pullout is set equal to the force acting on the block times a factor of safety,  $R_{FS} = F_{ps} \times F.S.$ . The resulting equation is solved for the minimum required length of embedment:

$$L_e = [K_{so} \times \gamma_n \times (a_1 \sin \alpha) \times A_{block} \times F.S.] / [C \times W_b \times 2 \text{ legs/block} \times 2 \text{ sides/leg} \times \sigma_c]$$

Additional strap is required to insure  $L_e$  is located beyond a local failure surface by layers. The length of strap in the active zone,  $L_a$  is calculated by:

$$L_a = \sigma_{eq} \text{ layer vertical spacing} / \tan \alpha$$

The strap required for each block is the sum of the embedment and active zone lengths. For typical construction, the longest required strap length is used for design.

Design Height (Varies)  
Exposed Wall Face (Height Varies)  
Bury Depth (Varies 4" (10.2 cm) Min.)  
Leveling Pad (Varies 4" (10.2 cm) Min.)  
Cast-In-Place Concrete Backfill (Minimum 2,500 psi Concrete)  
Rebar Ties Wrapped Around Lift Hook, Cast in Rosetta Blocks (18" (45.7 cm) Long No. 4 Bar Bent into a U-Shape, 9" (22.9 cm) Minimum Pad Leg)  
Cast-In-Place Concrete Backfill (Minimum 2,500 psi Concrete)  
Design Height (Varies)  
Exposed Wall Face (Height Varies)  
Bury Depth (Varies 4" (10.2 cm) Min.)  
Leveling Pad (Varies 4" (10.2 cm) Min.)  
Crushed Stone Leveling Pad (Extend to Back of Concrete Backfill)  
Foundation Soil As Specified by Engineer, Compact to a Min. of 95% Max. Dry Density (Or As Specified by Engineer)  
Fabric Required Between Stone Leveling Pad and C.I.P. Concrete to Prevent Migration of Concrete Into Stone Voids  
4" (10.2 cm) Dia. Perforated Drain - Required (Gravity Flow to Outlet through wall every 30' (15.2 m) on center or around ends of wall)  
C.I.P. Concrete  
Width of Concrete Backfill (Varies per Design)

# Also Available

All Rosetta products offer the beauty of natural stone with dramatically improved installation efficiency



**DIMENSIONAL STEP** COLLECTION



**GRAND FLAGSTONE** COLLECTION



**BELVEDERE** COLLECTION



**IRREGULAR STEP** COLLECTION

- Hand set wall stone
- Natural Face on both front and back
- Retaining and Freestanding walls and Columns possible

- Natural Texture
- Uniform Rise
- Form Meets Function

- Consistent Thickness
- Easy to Follow Pattern
- Grand Appearance



[www.discoverrosetta.com](http://www.discoverrosetta.com)



30% POST-CONSUMER FIBER