


**barkman™**

Barkman Landscape Kits

# Quarry Stone Fireplace Wood Storage

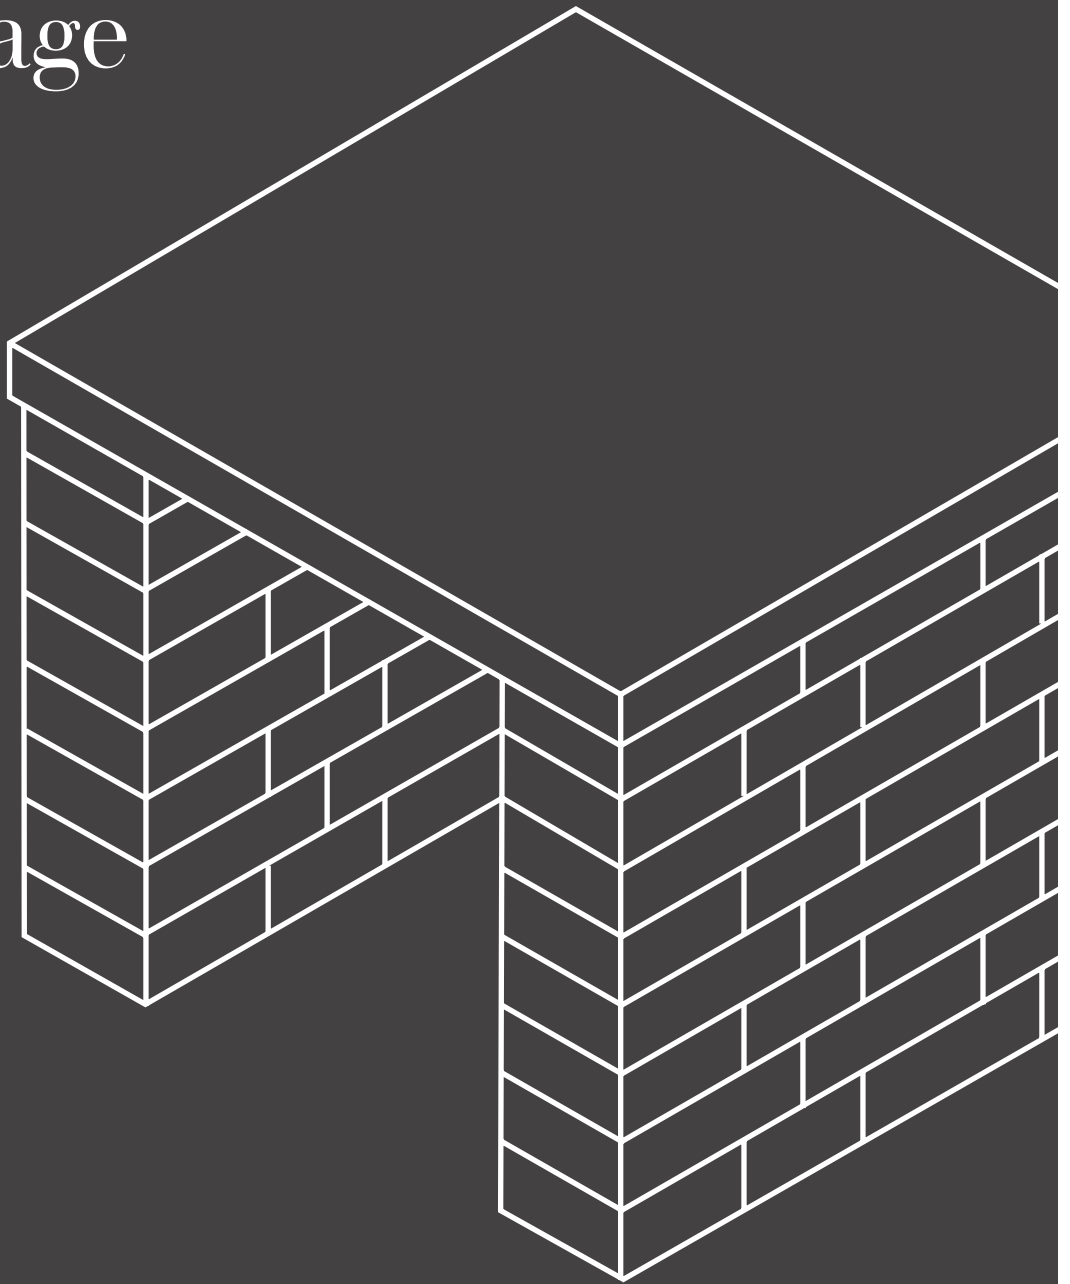

# Materials

---


This kit measures 35"H x 40"W x 36"D

**MATERIALS INCLUDED:**


- 12" x 8" Quarry Stone – 40 pieces
- 8" x 8" Quarry Stone – 36 pieces
- 1-piece Countertop
- Plastic Shims
- Tube of Landscape Glue
- Gloves
- Instruction Guide

**OTHER ITEMS NEEDED:**


- Rubber Mallet
- Caulking Gun
- Measuring Tape/Ruler
- Level

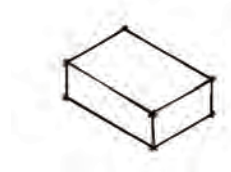

12" x 8"  
Quarry Stone

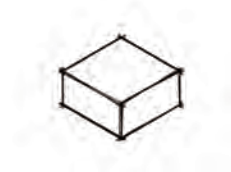

8" x 8"  
Quarry Stone

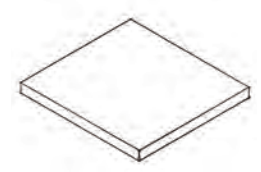

1-piece  
Countertop

# Base Preparation

---

**If installing your Barkman Quarry Stone Fireplace Wood Storage on an unstructured base, please ensure to follow these steps:**

- Excavate area approx. 5 inches below grade.
- Excavate approx. 6 inches larger than your actual kit dimensions to ensure a stable base.
- Fill 4" with  $\frac{3}{4}$  inch down limestone and compact firmly.
- Level out  $\frac{1}{2}$  inch of sand and install kit as per the instruction guide.

**If you are installing on a solid base such as an existing patio, base prep is not necessary. Please proceed to the first step.**

These instructions may not refer to all base conditions. As this kit is incredibly heavy, base prep will greatly depend on existing ground conditions and may require alternate techniques.

**Note:** This manual was updated on June 2020. For manual updates, check [www.barkmanconcrete.com/resources](http://www.barkmanconcrete.com/resources)

# Instructions


---

## 1

- A** Lay down the first layer as shown in the diagram.
- B** Check that stones are level at every step. Use included shims for adjustments.

**USE:**

- (4) 12 x 8 Quarry Stone blocks
- (6) 8 x 8 Quarry Stone blocks

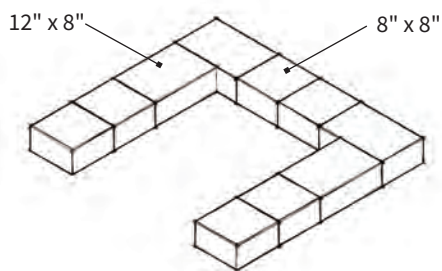


## 2

- A** Lay down the second layer as shown in the diagram.
- B** Glue down this layer to the layer below.
- C** Check that stones are level at every step. Use included shims for adjustments.

**USE:**

- (6) 12 x 8 Quarry Stone blocks
- (3) 8 x 8 Quarry Stone blocks

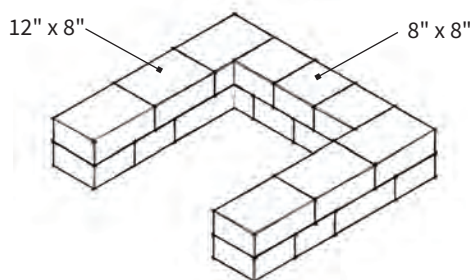


## 3

- A** Repeat the patterns from Step 1 and 2 until there are 8 layers total.
- B** Check that stones are level. Use included shims for adjustments.
- C** Glue down the 4th and 8th layers.

**USE:**

- (30) 12 x 8 Quarry Stone blocks
- (27) 8 x 8 Quarry Stone blocks

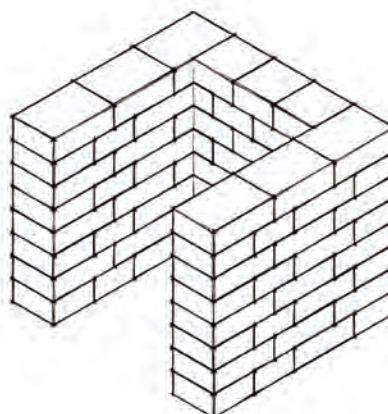

---


# 4

- A** Gently place and level the countertop on top of the last layer of Quarry Stone using the provided shims.
- B** The smooth edge should be flush with either the left or right side of your fireplace, while having equal overhang on the remaining 3 sides.

**USE:**

1-piece Countertop

**Note:** Allow glue to set properly before placing objects on top of the pillar cap. Refer to directions printed on the included adhesive for setting times.

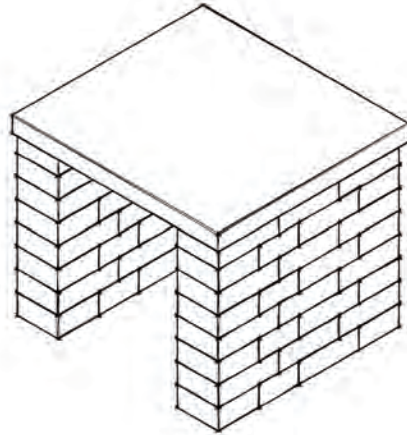



# barkman™

## STEINBACH OFFICE

152 Brandt Street,  
Steinbach, MB R5G 0R2  
T 204 326 3445 or 1 800 461 2278  
F 204 326 5915  
Steinbach@BarkmanConcrete.com

## WINNIPEG OFFICE

901 Gateway Road,  
Winnipeg, MB R2K 3L1  
T 204 667 3310 or 1 800 342 2879  
F 204 663 4854  
Winnipeg@BarkmanConcrete.com

## CALGARY OFFICE

813 McCool Street, Box 1136,  
Crossfield, AB T0M 0S0  
T 403 946 4630 F 403 946 4631  
Calgary@BarkmanConcrete.com

## VANCOUVER OFFICE

2104-290 Newport Drive,  
Port Moody, BC V3H 5N2  
T 778 689 7670 or 1 800 461 2278  
F 604 949 0321  
Vancouver@BarkmanConcrete.com

## SASKATOON DISTRIBUTION CENTER

3550 Idylwyld Drive North,  
Saskatoon, SK S7L 6G3  
T 1 306 549 7544

## KELOWNA DISTRIBUTION CENTER

1904 Old Okanagan Highway,  
Westbank, BC V4T 1T8  
T 1 204 346 9490

## SURREY DISTRIBUTION CENTER

8157 132nd Street,  
Surrey, BC V3W 4N5  
T 1 204 346 9490

BARKMAN CONCRETE LIMITED

[BarkmanConcrete.com](http://BarkmanConcrete.com)

