


barkman™

Barkman Landscape Kits

Quarry Stone Fireplace Wood Storage

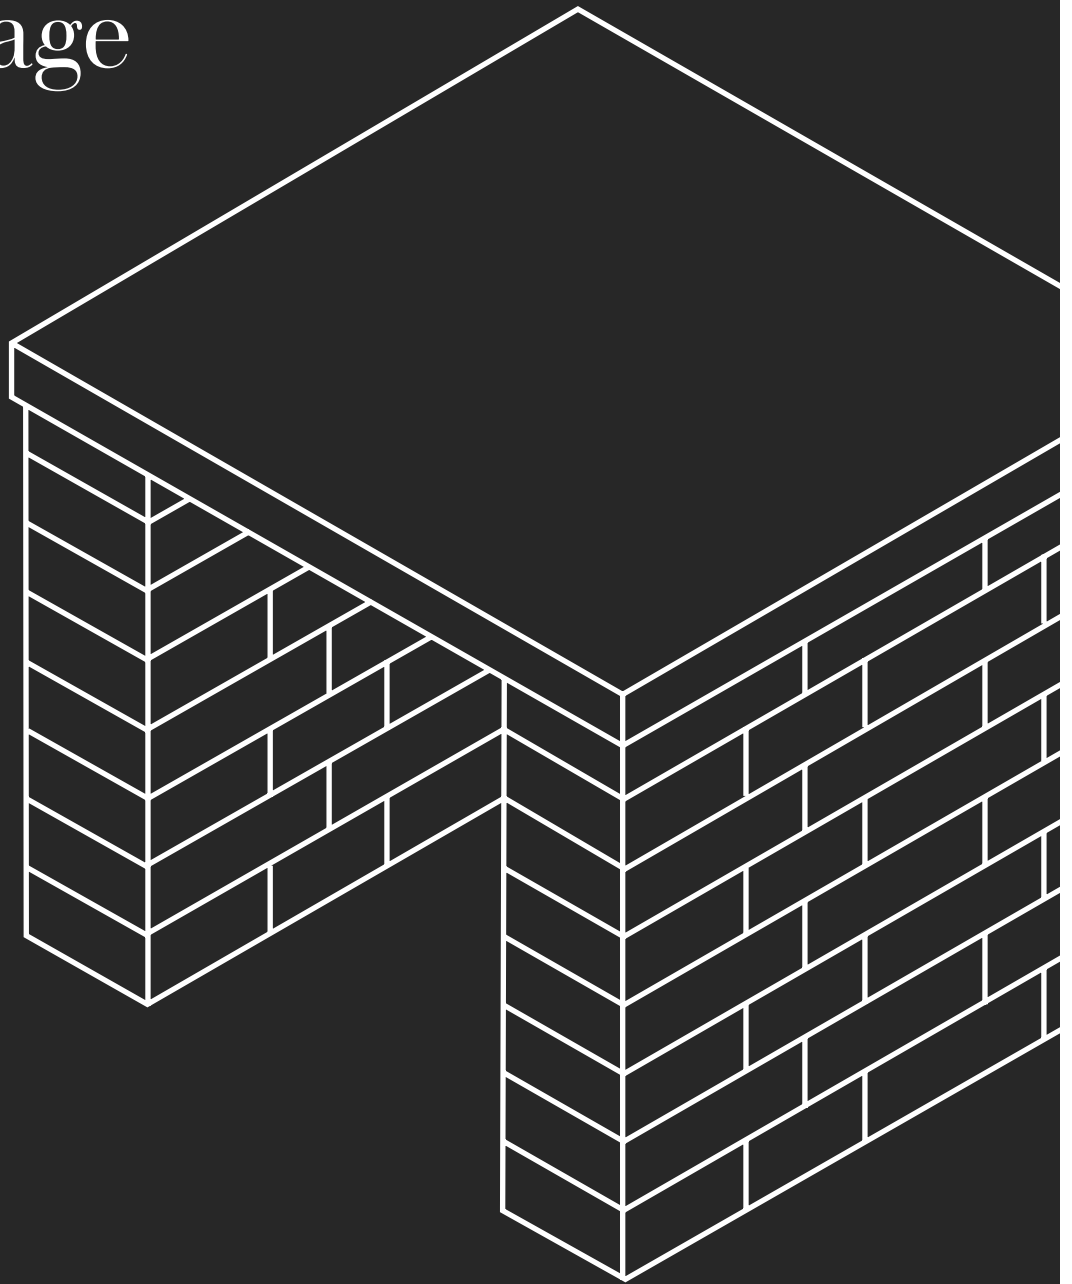

Materials


This kit measures 35"H x 40"W x 36"D

MATERIALS INCLUDED:

- 12" x 8" Quarry Stone – 40 pieces
- 8" x 8" Quarry Stone – 36 pieces
- 1-piece Countertop
- Plastic Shims
- Tube of Landscape Glue
- Gloves
- Instruction Guide

OTHER ITEMS NEEDED:

- Rubber Mallet
- Caulking Gun
- Measuring Tape/Ruler
- Level

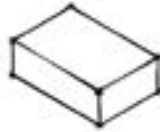

12" x 8"
Quarry Stone



8" x 8"
Quarry Stone



1-piece
Countertop

Base Preparation

If installing your Barkman Quarry Stone Fireplace Wood Storage on an unstructured base, please ensure to follow these steps:

- Excavate area approx. 5 inches below grade.
- Excavate approx. 6 inches larger than your actual kit dimensions to ensure a stable base.
- Fill 4" with $\frac{3}{4}$ inch down limestone and compact firmly.
- Level out $\frac{1}{2}$ inch of sand and install kit as per the instruction guide.

If you are installing on a solid base such as an existing patio, base prep is not necessary. Please proceed to the first step.

These instructions may not refer to all base conditions. As this kit is incredibly heavy, base prep will greatly depend on existing ground conditions and may require alternate techniques.

Note: This manual was updated on May 2021. For manual updates, check www.barkmanconcrete.com/resources


Instructions

1

- A** Lay down the first layer as shown in the diagram.
- B** Check that stones are level at every step. Use included shims for adjustments.

USE:

- (4) 12 x 8 Quarry Stone blocks
- (6) 8 x 8 Quarry Stone blocks

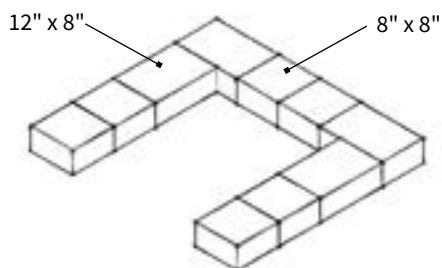


2

- A** Lay down the second layer as shown in the diagram.
- B** Glue down this layer to the layer below.
- C** Check that stones are level at every step. Use included shims for adjustments.

USE:

- (6) 12 x 8 Quarry Stone blocks
- (3) 8 x 8 Quarry Stone blocks

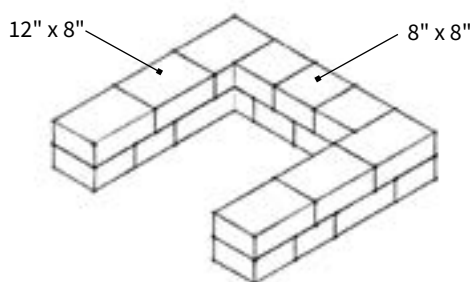


3

- A** Repeat the patterns from Step 1 and 2 until there are 8 layers total.
- B** Check that stones are level. Use included shims for adjustments.
- C** Glue down the 4th and 8th layers.

USE:

- (30) 12 x 8 Quarry Stone blocks
- (27) 8 x 8 Quarry Stone blocks

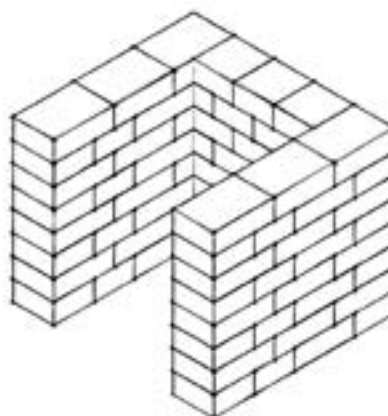


4

- A** Gently place and level the countertop on top of the last layer of Quarry Stone using the provided shims.
- B** The smooth edge should be flush with either the left or right side of your fireplace, while having equal overhang on the remaining 3 sides.

USE:
1-piece Countertop

Note: Allow glue to set properly before placing objects on top of the pillar cap. Refer to directions printed on the included adhesive for setting times.

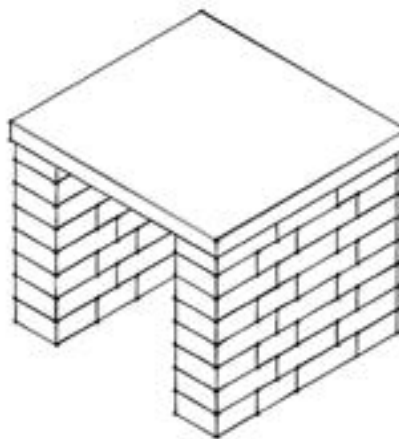

barkman™

STEINBACH OFFICE

152 Brandt Street,
Steinbach, MB R5G 0R2
T 204 326 3445 or 1 800 461 2278
F 204 326 5915
Steinbach@BarkmanConcrete.com

WINNIPEG OFFICE

901 Gateway Road,
Winnipeg, MB R2K 3L1
T 204 667 3310 or 1 800 342 2879
F 204 663 4854
Winnipeg@BarkmanConcrete.com

CALGARY OFFICE

813 McCool Street, Box 1136,
Crossfield, AB T0M 0S0
T 403 946 4630
F 403 946 4631
Calgary@BarkmanConcrete.com

VANCOUVER OFFICE

Port Moody, BC
T 1 800 461 2278
F 604 949 0321
Vancouver@BarkmanConcrete.com

MERRITT OFFICE

1132 Middy Valley Road
Merritt, BC V1K 1M9
T 778 661 1408

SASKATOON DISTRIBUTION CENTER

3550 Idylwyld Drive North,
Saskatoon, SK S7L 6G3
T 1 800 461 2278

BARKMAN CONCRETE LIMITED

BarkmanConcrete.com

